



Door restrictors

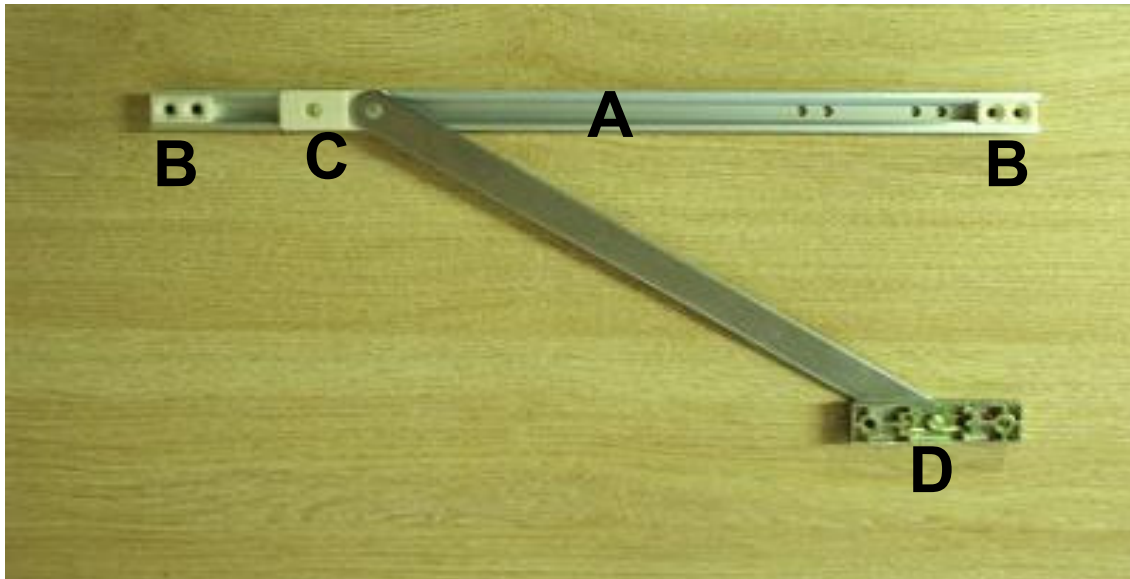

Sash

- Place sash arm (A) in euro groove on top of door sash making sure plastic slide (C) is facing away from hinge side of sash.
- Measure in **100mm** for **FLAG HINGES** from short leg of sash corner
Measure in **110mm** for **BUTT HINGES** from short leg of sash corner
- Fix arm (A) through end guides (B) using 4 off CFG 4.3x25 Z UPVC screws. (See pic 1 for details)

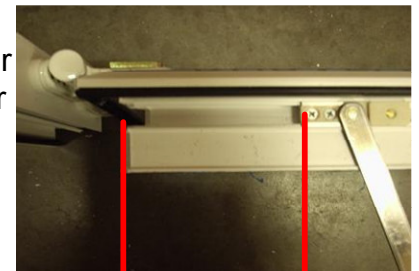

Pic 1


100mm Flag hinges
110mm Butt hinges.

Frame

- Measure in 90mm from inside corner of frame and place frame pivot (D) in bottom chamber of frame up against centre rib. Secure frame pivot (D) using 2 off CFG 4.3x25 Z UPVC screws. (See pic 2 for details).

Frame pivot

90 mm from inside corner.

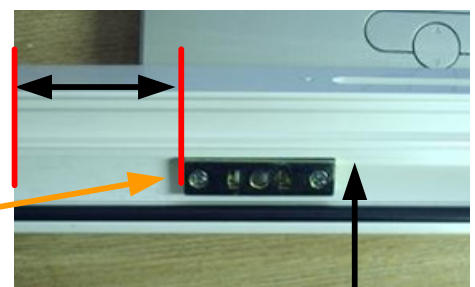

Frame pivot in bottom channel of frame.

Up against centre rib.

Pic 2